BARCODE LABEL SCALE

PC SOFTWARE MANAGEMENT

Pinnacle Technology Corp.

CONTENT

| 1 | INSTA | ALLATION | 1 | | | |
|---|---------|-----------------------------------|----|--|--|--|
| | 1.1 | Driver Installation | 1 | | | |
| | 1.2 | Program Installation | 3 | | | |
| 2 | Link so | Link scale to PC | | | | |
| 3 | How to | v to update program1 | | | | |
| 4 | How to | low to download Font | | | | |
| 5 | Label | | | | | |
| | 5.1 | Menu Column Introduction | 12 | | | |
| | 5.2 | How to make label | 13 | | | |
| | 5.3 | How to modify label | 15 | | | |
| | 5. | .3.1 Modify a whole label | 15 | | | |
| | 5. | .3.2 Modify a single item | 16 | | | |
| | 5.4 | Alignment function | 17 | | | |
| | 5.5 | Spacing setting | 17 | | | |
| | 5.6 | Zoom in & zoom out | 18 | | | |
| 6 | PLU | | 18 | | | |
| | 6.1 | PLU editing | 18 | | | |
| | 6.2 | Text editing | 28 | | | |
| | 6.3 | Discount information editing | | | | |
| | 6.4 | Link discount information editing | 37 | | | |
| | 6.5 | Date time information editing | 37 | | | |
| | 6.6 | Tare information editing | 37 | | | |
| | 6.7 | Package information editing | | | | |
| | 6.8 | System | 40 | | | |
| | 6.9 | Data Transaction function | 47 | | | |
| | 6.10 | Delete PLU data function | 48 | | | |
| | 6.11 | Nutrition template | 49 | | | |
| | 6.12 | How to edit nutrition | 51 | | | |
| 7 | HOEK | (FY | 52 | | | |


1 INSTALLATION

1.1 Driver Installation

You should install the driver before you install the software. Double click the "dotNetFx40_Full_x86_x64.exe", then you will see the below interface:





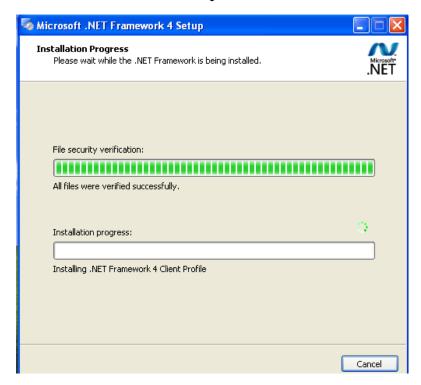





1.2 Program Installation

Double click "setup.exe", and then you will see below interface:






















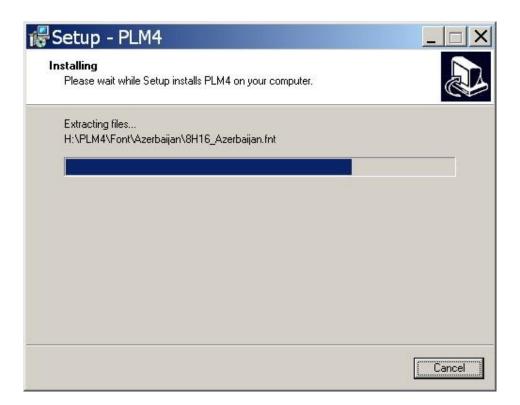






2 Link scale to PC


- 1. Connect scale to PC: Via Ethernet port
- 2. Communication Test

Double click LS2.exe, and then you can see below interface:




The default user name is 'admin' and password is '123'.

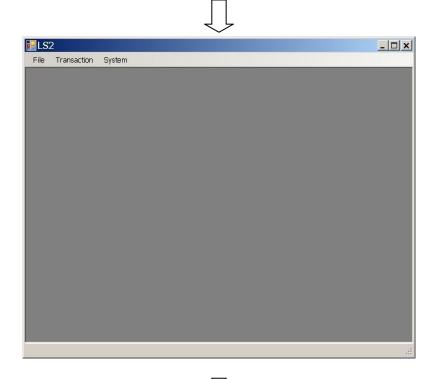


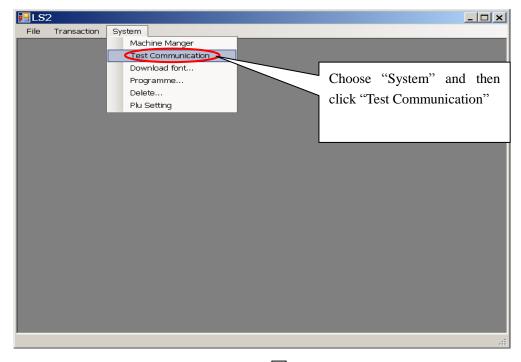





You can choose "single device" or "multidevice" at your need and click "execute" to confirm.

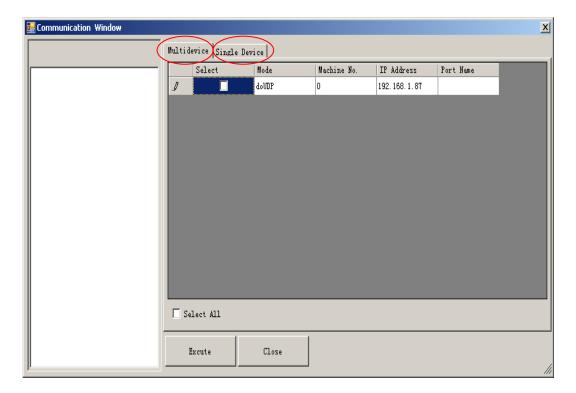

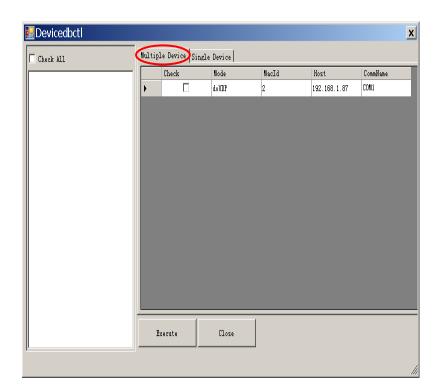

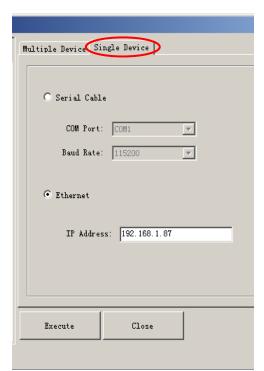





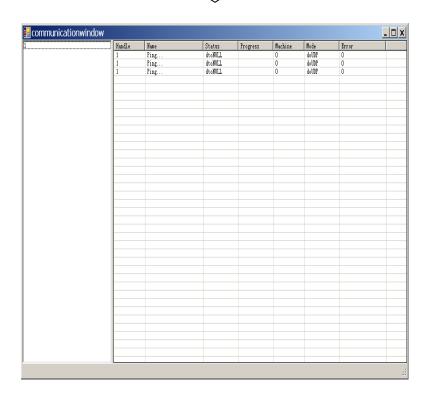



3 How to update program


Double click LS2.exe and confirm the PC connect with scale well. Choose and click "System---download program..."

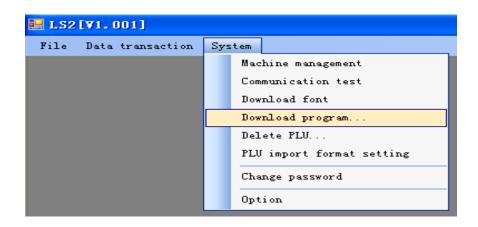

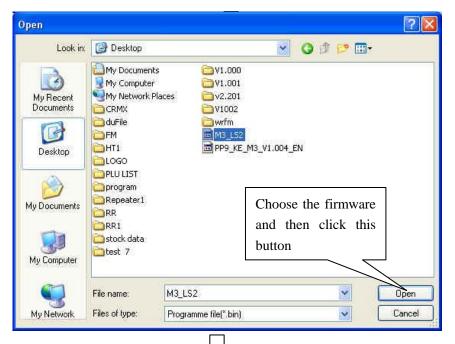

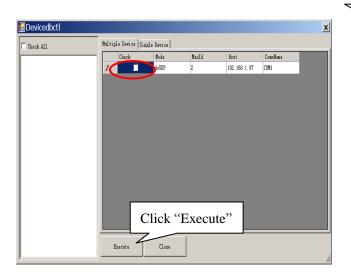


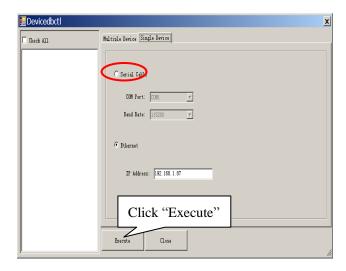

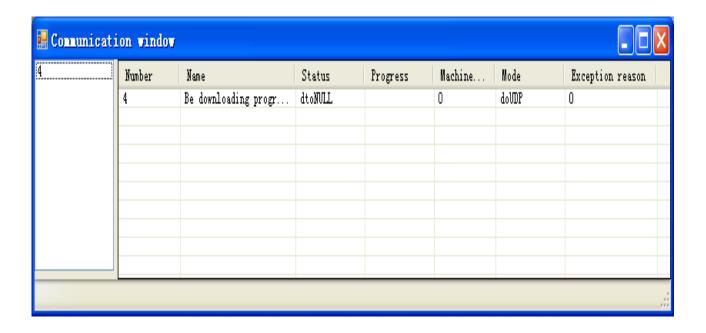



4 How to download Font

Double click LS2.exe and confirm the PC connect with scale well. Choose and click "System---Download font..."

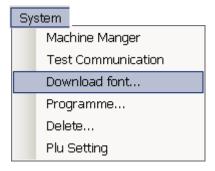



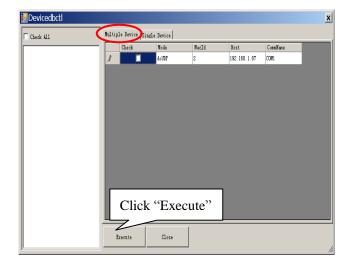


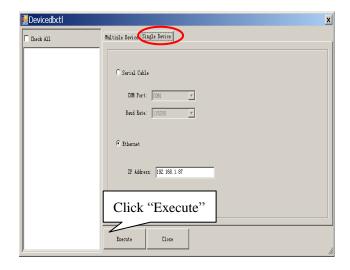

5 Label

5.1 Menu Column Introduction

♦ File menu

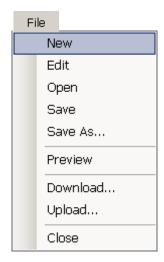

New: create a new label. The same as the short cut icon

Edit: Edit the label type and size

Open: Open a label that you have edited and saved. The same as the short cut

icon 📴

Save and Save as: save the label or save the label as other name or to other route. The same as the short icon and

Preview: Preview the label to check the effect.

Download: Download the label to the scale. This function is the same as the

short cut icon

Upload: Upload the label from scale to PC. This function is the same as the

short cut icon 🛉

♦ Edit menu



Undo: Return last step operation. This function is the same as the short cut icon in tool boor

Redo: This function is the same as the short cut icon in tool bar


♦ System menu


System


Machine Manger Custom barcode... Machine Manger: Manage machine Custom barcode: set customer barcode

5.2 How to make label

Double click labelApplication1.exe, and then you will see below interface:

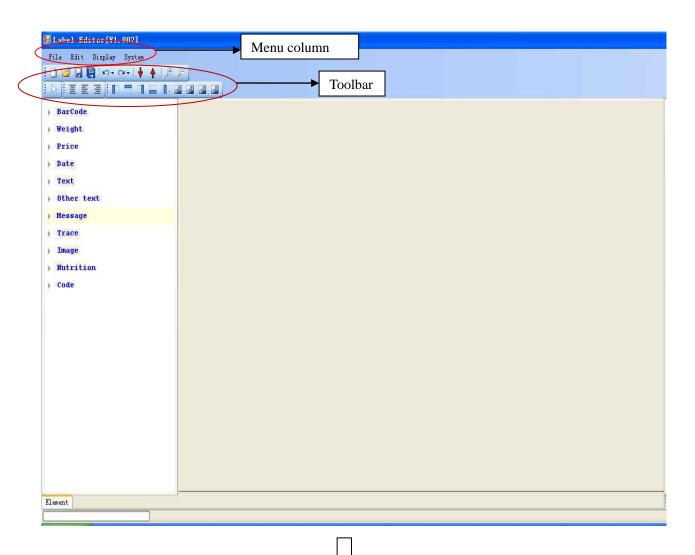

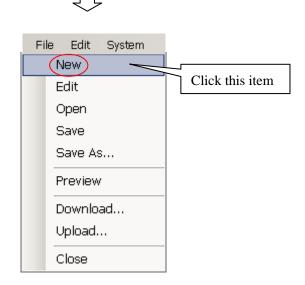

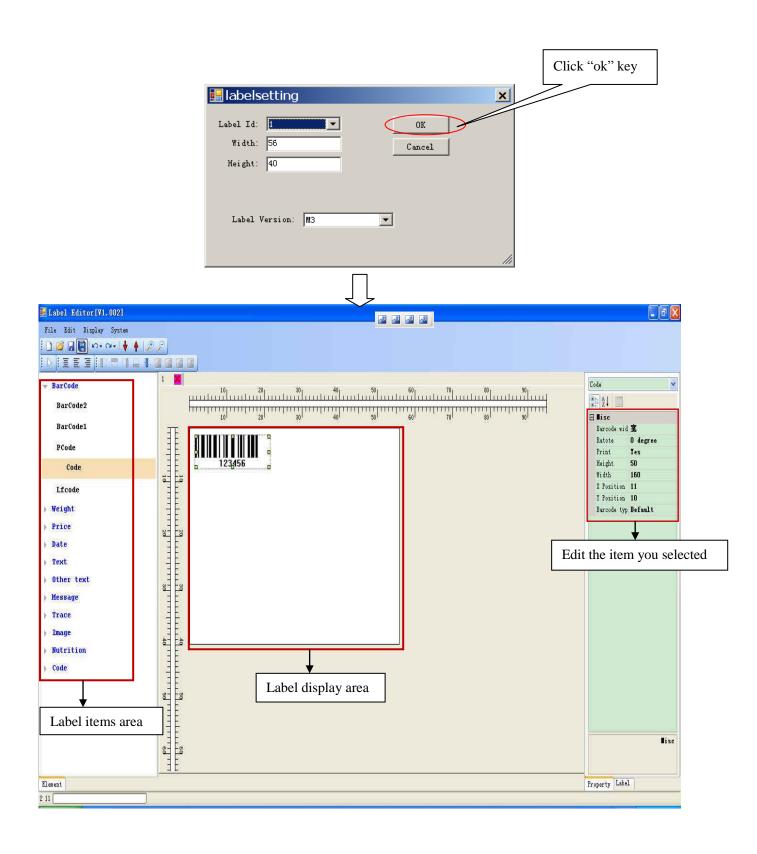

Basic label editing steps:

- 1) Click the item that you needed in label items area.
- 2) Click the mouse; hold it and drag a box on the label, and then you can see the item will be displayed on the label.
- 3) Make the item in selected state.
- 4) Use your mouse to get close to the border, when the mouse became the icon like below image A, B or C, means you can adjust the width or length. If the mouse became the icon like image C, means you can adjust the whole border. If the mouse became the icon like image D, means you can move the item to any position.

For example:



Image A

Use your mouse get close to the boarder till the mouse became the icon, and then click the mouse, hold it and drag the mouse till you get satisfied of the width.



Image C

Use your mouse get close to the boarder till the mouse became the icon, and then click the mouse, hold it and drag the mouse till you get satisfied.



Use your mouse get close to the boarder till the mouse became the icon, and then click the mouse, hold it and drag the mouse till you get satisfied of the length.




Image D

Use your mouse get close to the boarder till the mouse became the icon, and then click the mouse, hold it and drag the mouse to move the item.

5.3 How to modify label

5.3.1 Modify a whole label

Click any blank position on the label, and then you can modify the whole label via the right column.

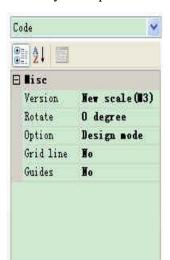



- Version: Click it to choose scale M3 version or old version.
- ♦ Rotate: To choose you rotate degree of your label
- ◆ Option: to choose option mode
- ◆ Grid Line: Click it to choose whether have grid line or not.
- Guides: Click it to choose whether have guides or not.

5.3.2 Modify a single item

If you want to modify the related item on the label, you should click it firstly to make it in selected status, and then you can modify it by the below area.

For example, when you need to modify you production date label,

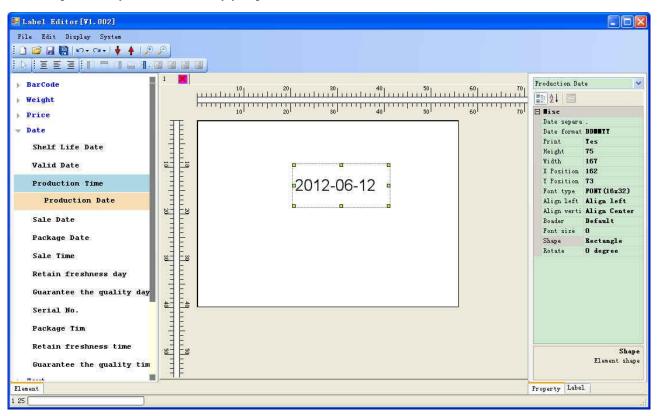

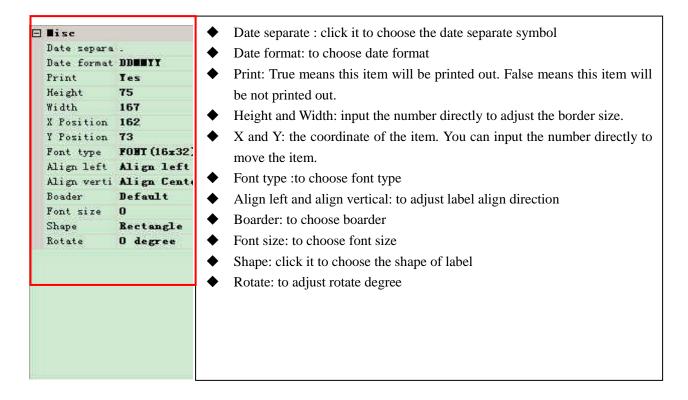


5.4 Alignment function



- Left justify: Select two or more than two items, then use mouse to click this icon, the items you selected will be left justifying.
- Top justify: Select two or more than two items, then use mouse to click this icon, the items you selected will be top justifying.
- Right justify: Select two or more than two items, then use mouse to click this icon, the items you selected will be right justifying.
- Bottom justify: Select two or more than two items, then use mouse to click this icon, the items you selected will be bottom justifying.

 5.5 Spacing setting



Same spacing in vertical: Select items and click this button, the space between these items is the same.

Same height: Select items and click this button, the height of all the items is the same with the first one selected.

Same width: Select items and click this button, the width of all the items is the same with the first one selected.

5.6 Zoom in & zoom out



Zoom in: Click the item that you need to zoom in and make it in selected state, click this zoom in icon.




Zoom out: Click the item that you need to zoom out and make it in selected state, click this zoom out icon.


6 PLU

6.1 PLU editing


Double click LS2.exe, and then you will see below interface:

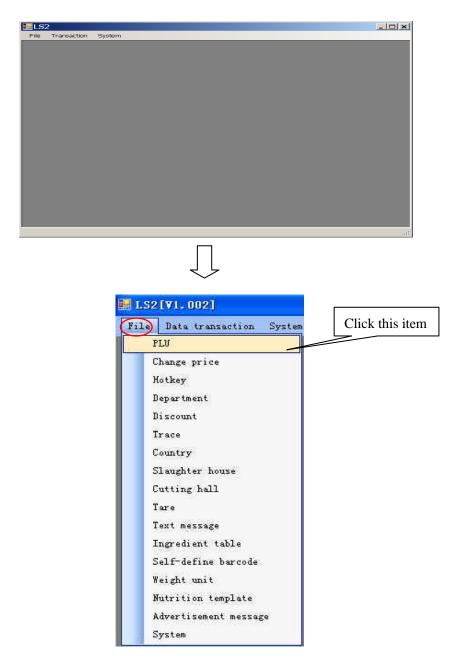



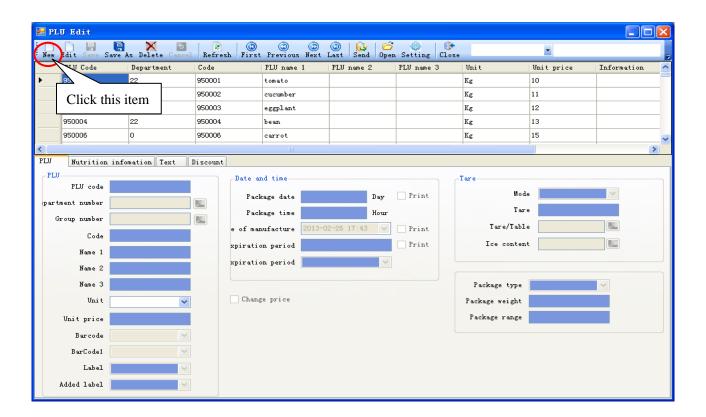



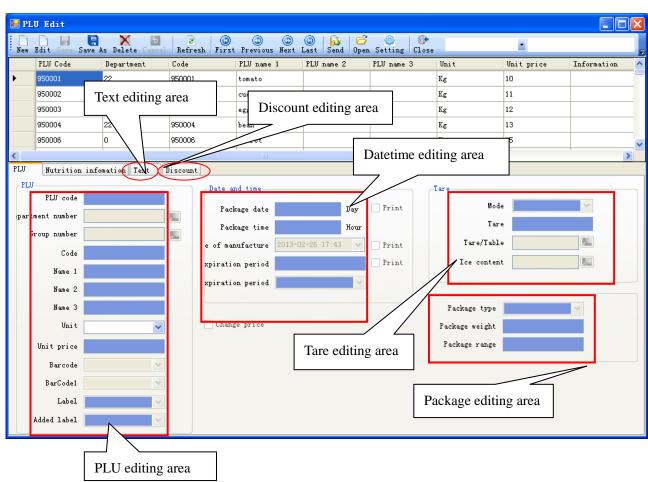

1) PLU toolbar introduction



New: Click it to add a new PLU.

Edit: Click it to modify the PLU information.

Save/Save as: save the PLU information that you have edited.


Delete: delete the PLU information. Cancel: click it to cancel the editing.

Refresh: when you upload the PLU data to PC, click this icon; the system will update the information at

once.


First: click this icon, the first PLU will be in selected state. Last: click this icon; the last PLU will be in selected state.

Send: click this icon and then you will see below interface:

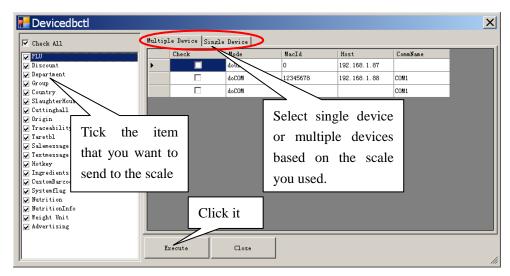

Open: Click this icon to open the PLU information that you have edited.

Setting: the command is used to set the PLU column. Click it and then you will see below interface:

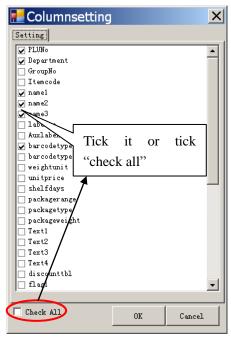


Close: click this icon to exit the interface.


Search: input LFcode or name to search PLU.

- ◆ LFcode: input LFcode directly.
- ◆ **Department No.:** You can't input the **department no** in this box directly. The department No. should be edited in other interface firstly.


Choose and click "File----Department"

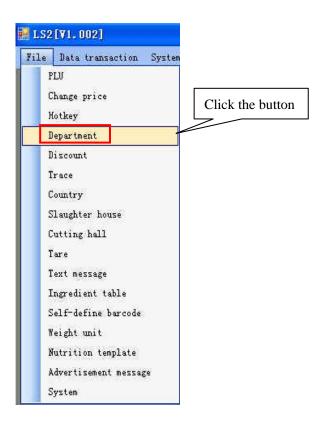




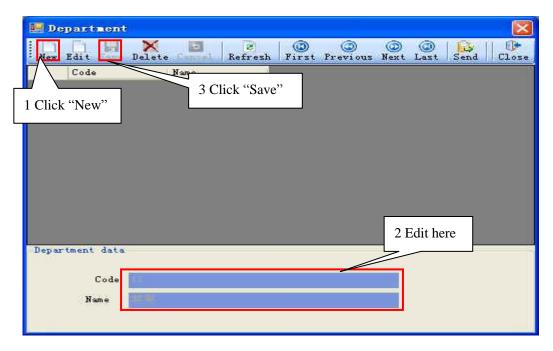



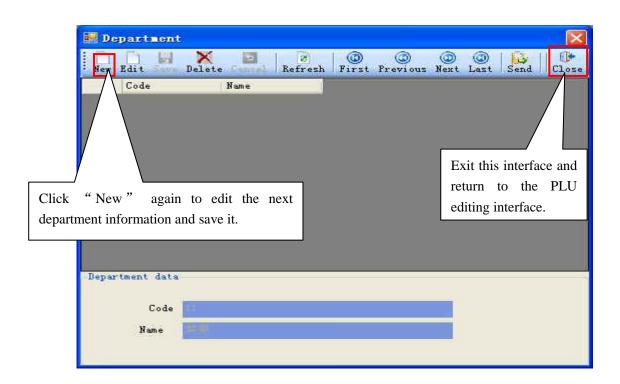




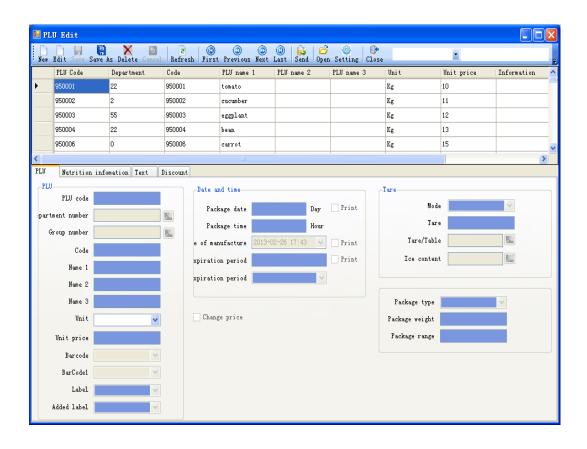










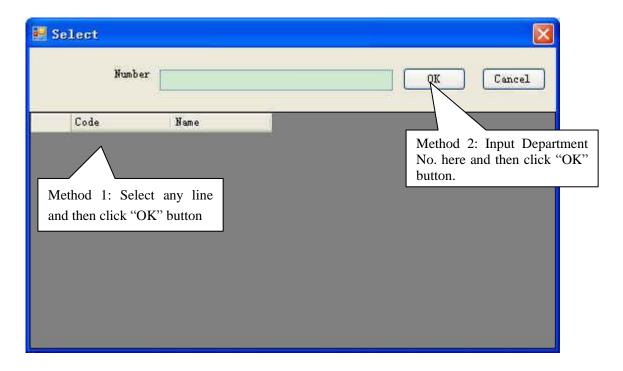


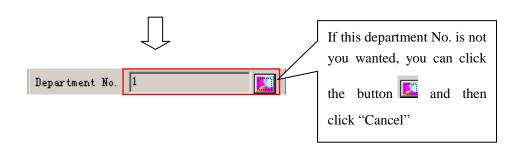


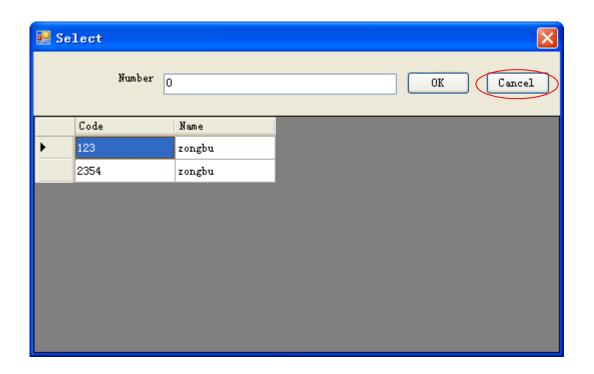


♦ Trace:

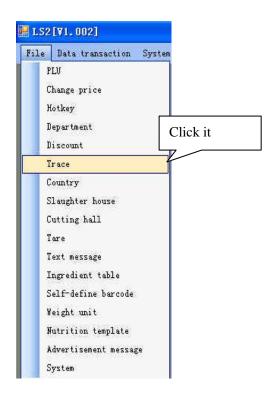

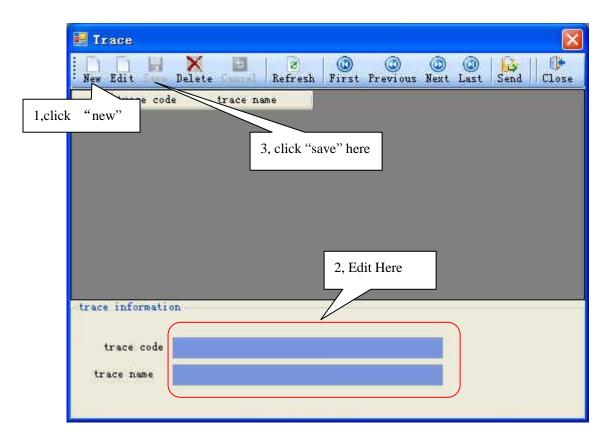


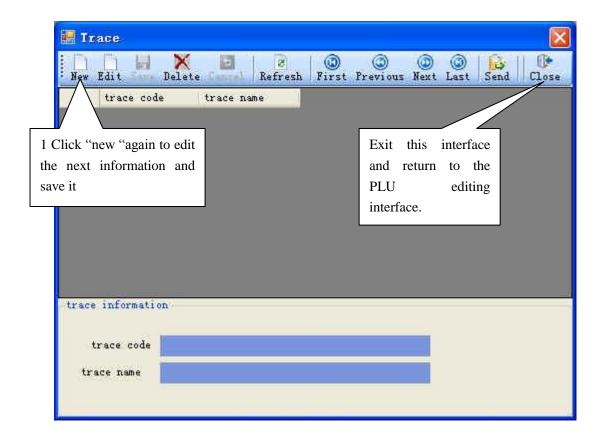

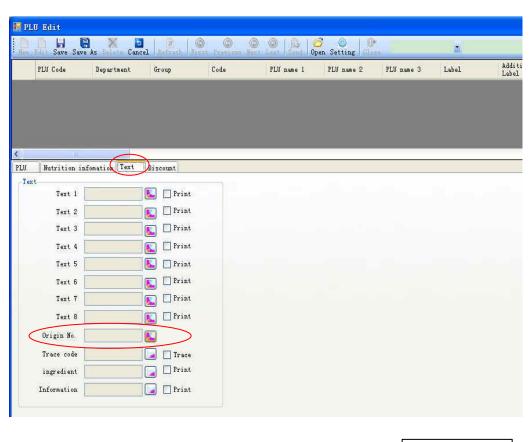


Origin No.

Click it

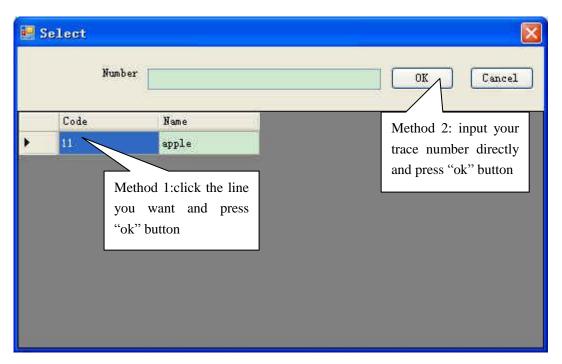


If you want to cancel the trace information

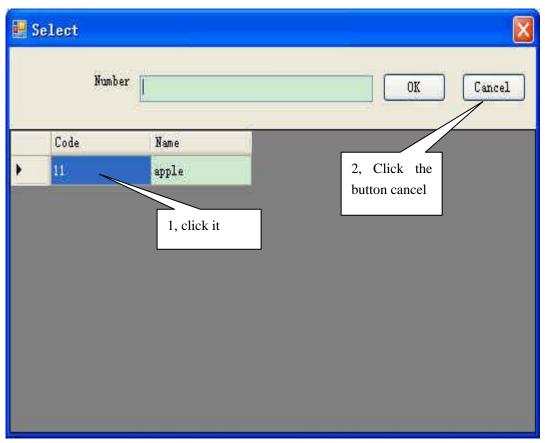


6.2 Text editing


◆ Text1 & Text2 & Text3 & Text4: You can't input text information in this box directly. The Text information should be edited in other interface firstly.

Choose and click "File----Text Message"

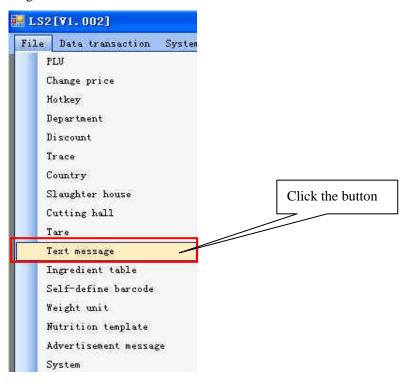




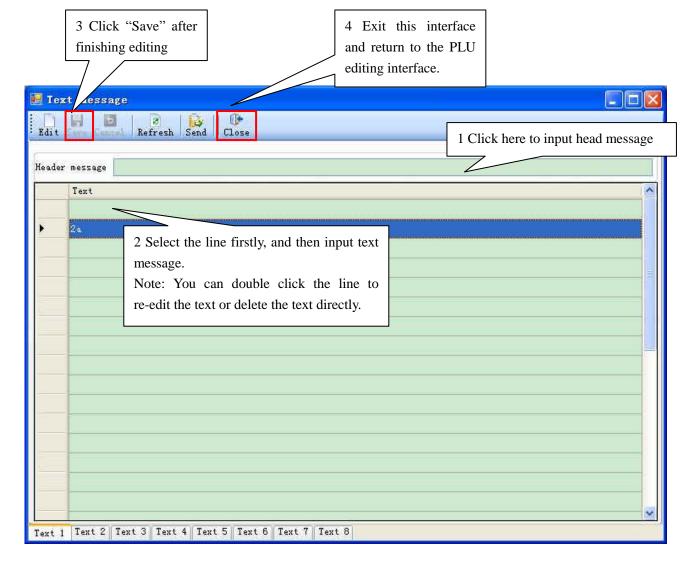


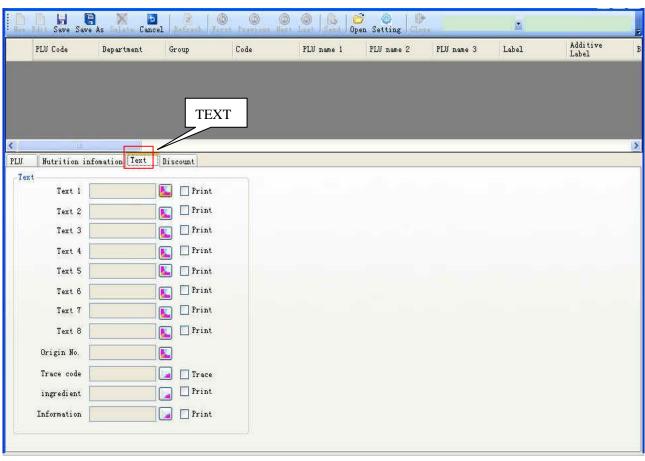


Then, you can Click the text that you want to edit on PLU interface. For example:

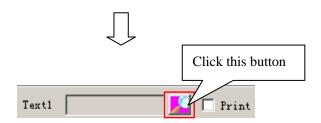




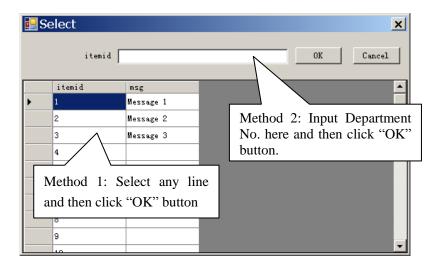




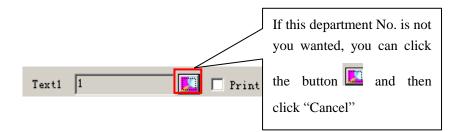


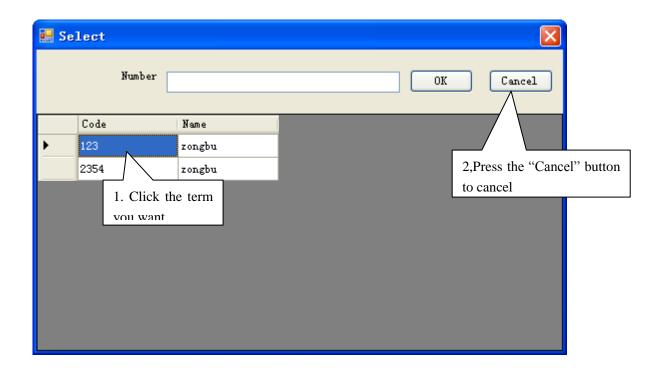


◆ Country. : Choose and click "File----Country"

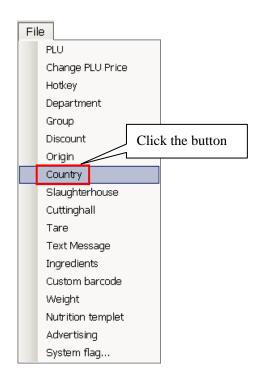




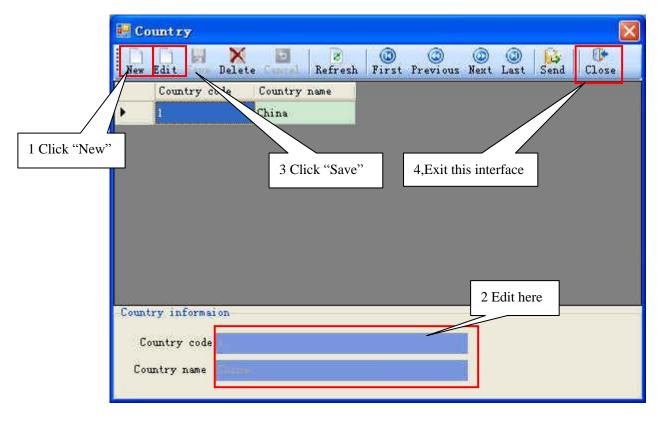


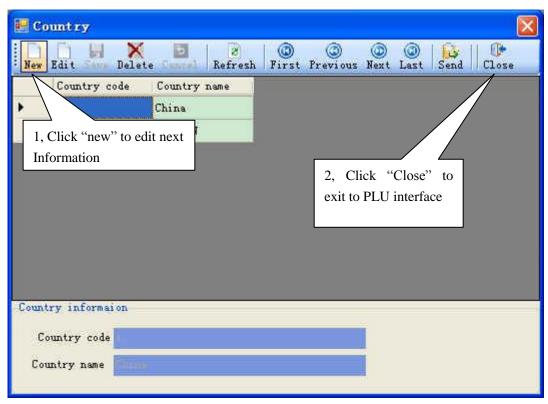


◆ This function is only used for the PLU traceability. Choose and click "File----Slaughterhouse"

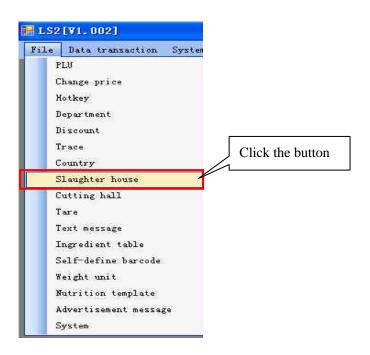




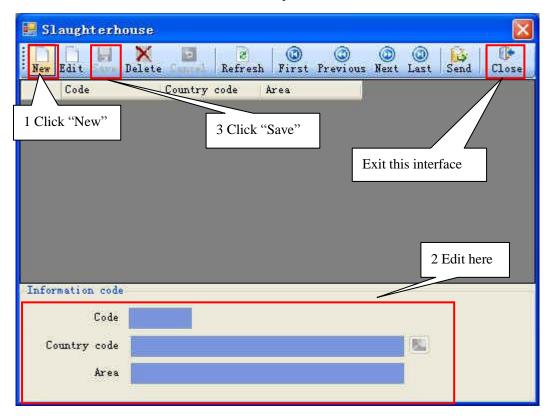


◆ This function is only used for the PLU traceability. Choose and click "File----Cutting hall"

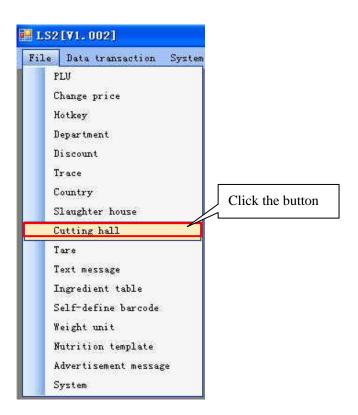





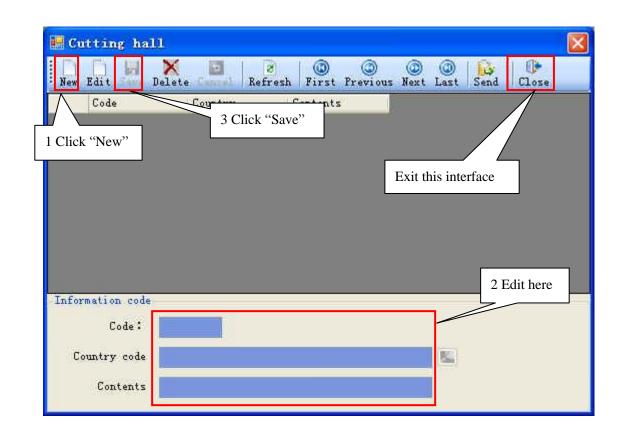

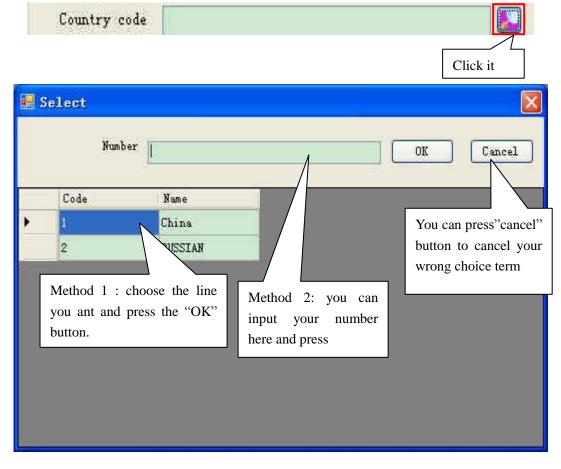


6.3 Discount information editing

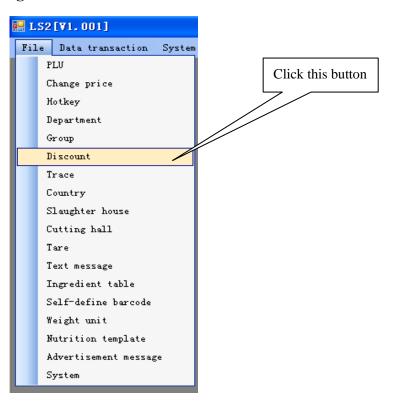

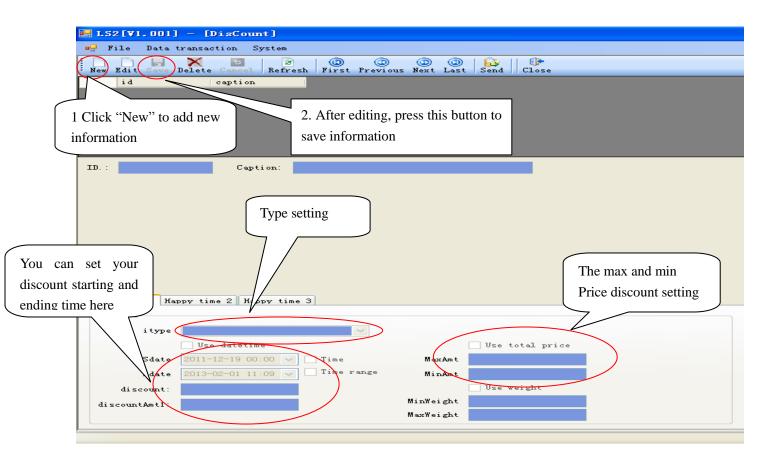

 6.4 Link discount information editing




◆ Mode:




6.5 Date time information editing

you can edit information on PLU interface directly.

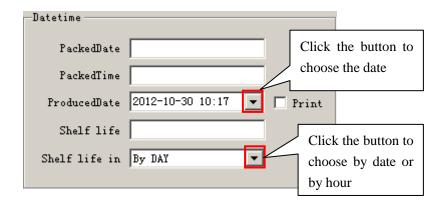


6.6 Tare information editing

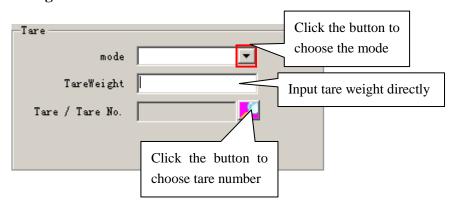

Tare/Tare No.: Choose and click "File----Tare"






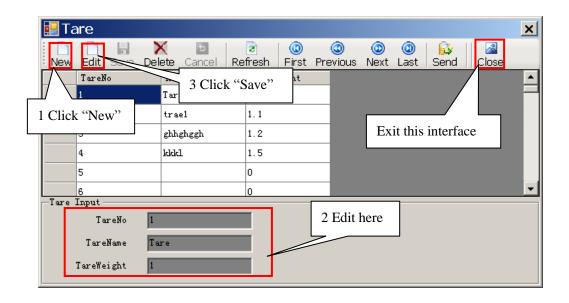

You can add more information by pressing "new" button again.

6.7 Package information editing

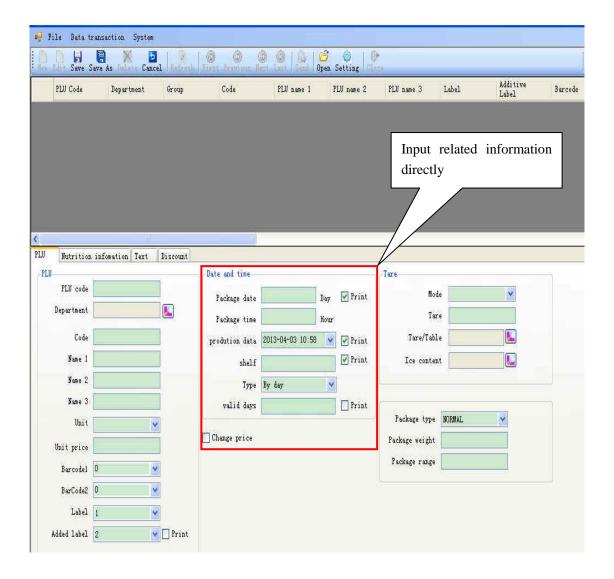


6.8 System


Double click LS2.exe, and then you will see below interface:

(1) Machine management






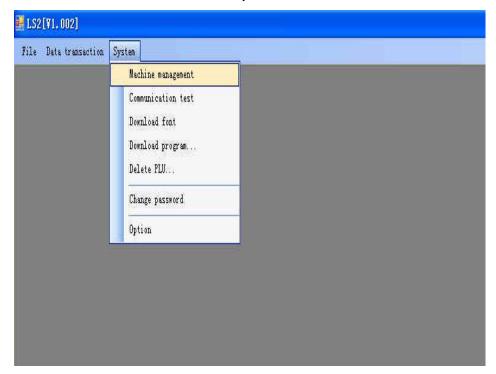


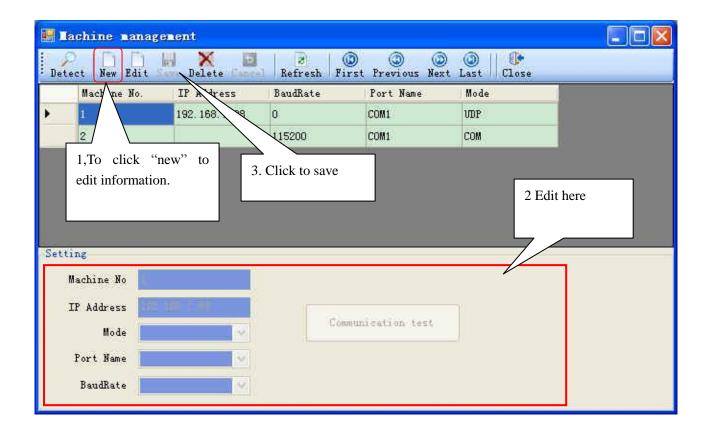

(2) Communication Test




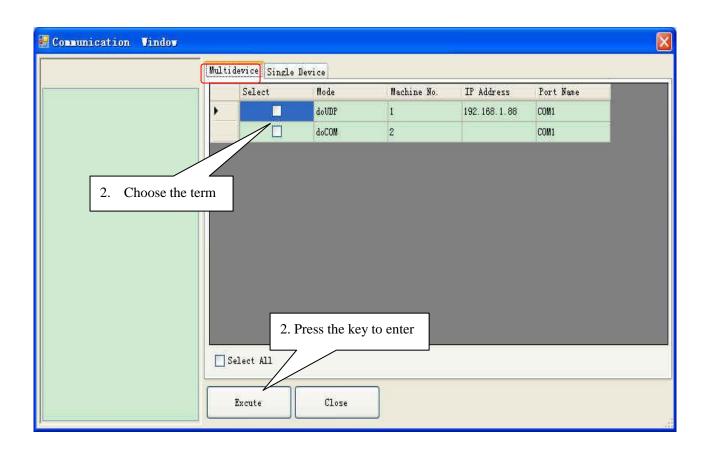


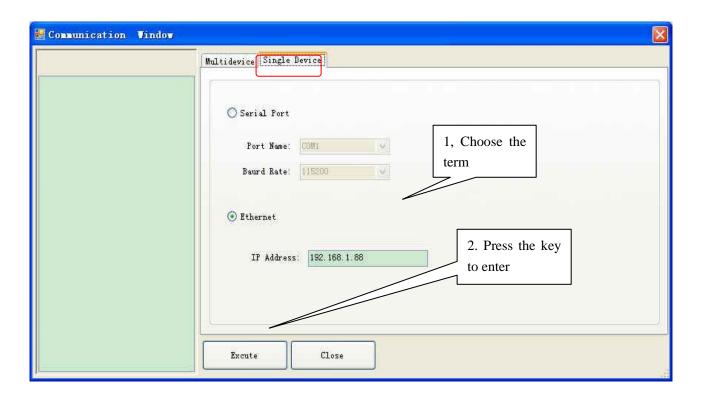

(3) Download Font



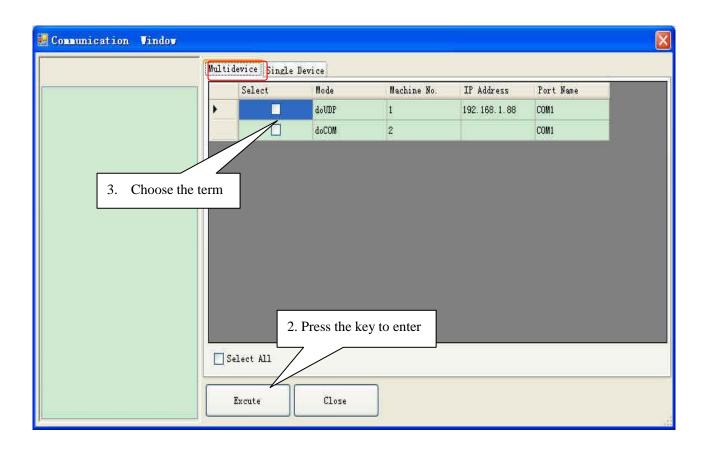

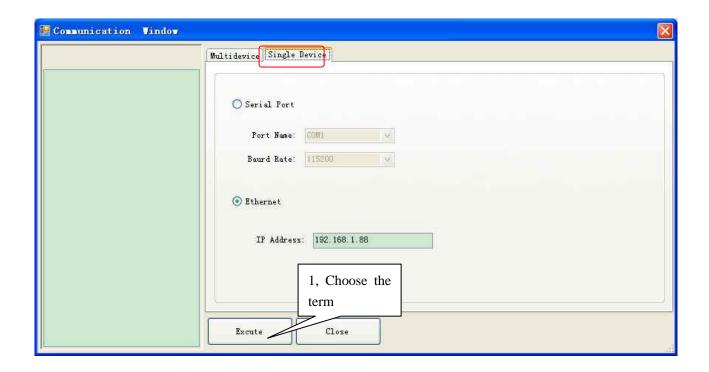



(4) Download program




(5) Delete PLU




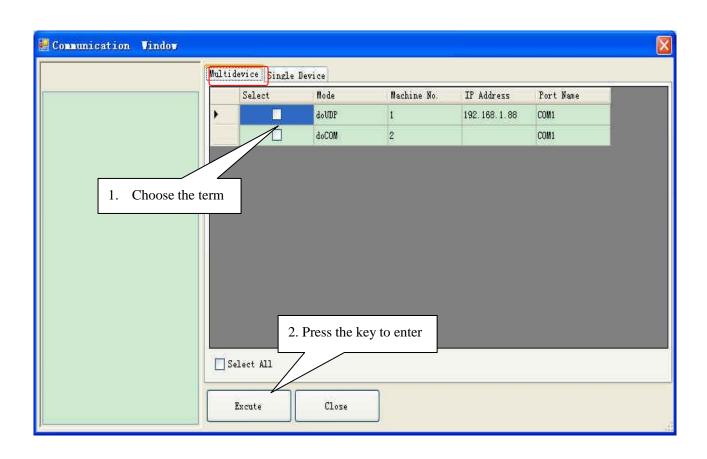

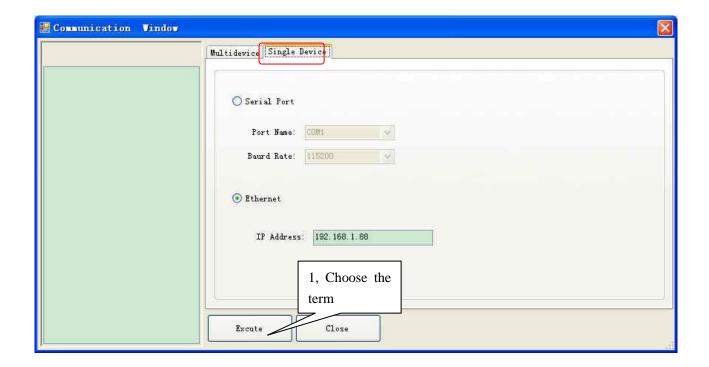

(6) Change password

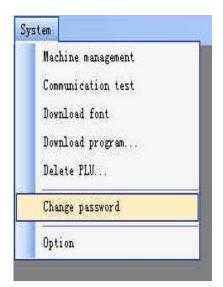

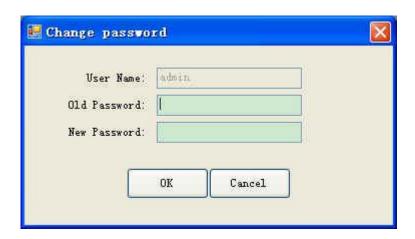



6.9 Data Transaction function

♦ Send data function

This function is used to download data from PC to scale.

Click "Data Transaction----send data", and then you will see below interface:

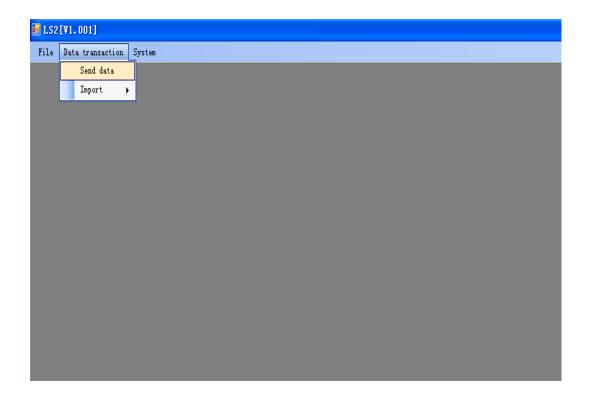


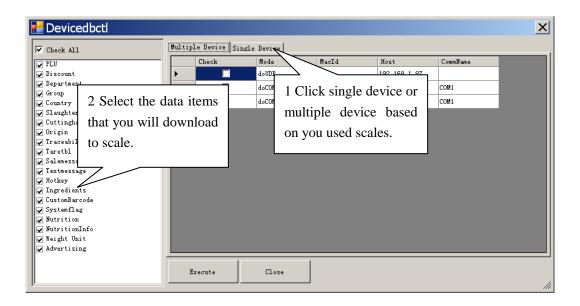

♦ Import data function


This function is used to upload data from scale to PC.


Click "Data Transaction----import ----from device", and then you will see below interface:

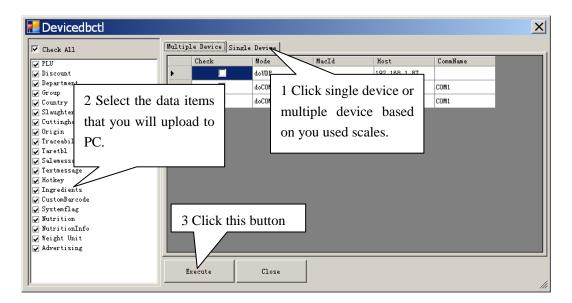

6.10 Delete PLU data function

Choose and click "System—Delete", and then you will see below interface:

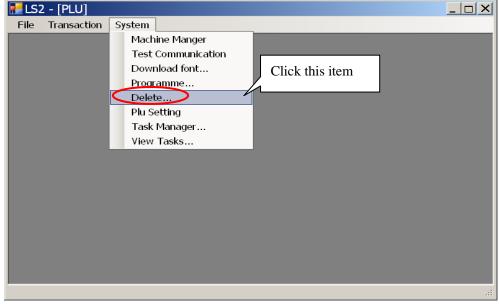


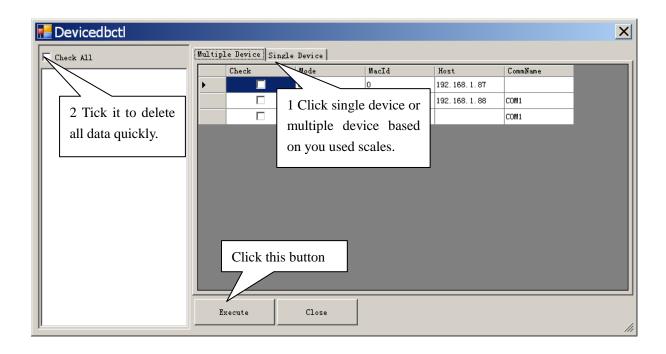


6.11 Nutrition template

♦ Edit nutrition information


Choose and click "File---nutrition template"

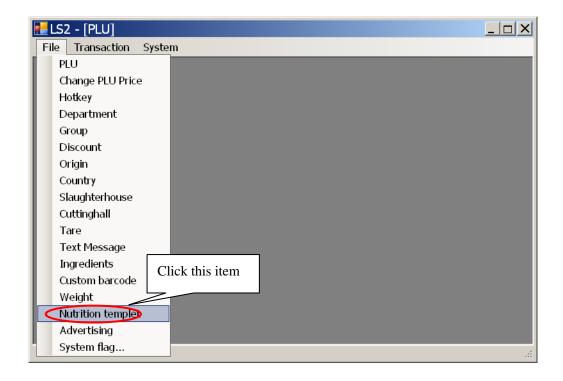



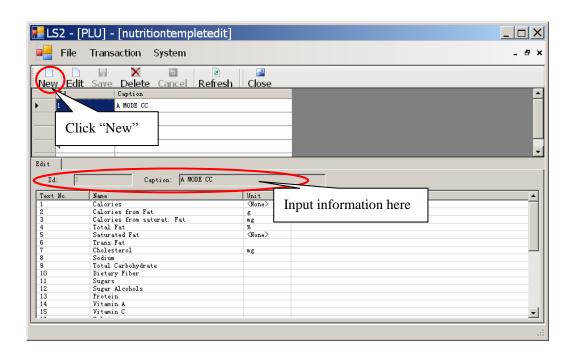


♦ Use the nutrition information

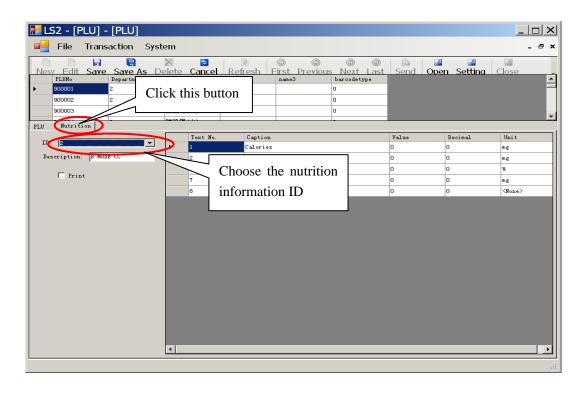

6.12 How to edit nutrition


Choose and click "File---- PLU"

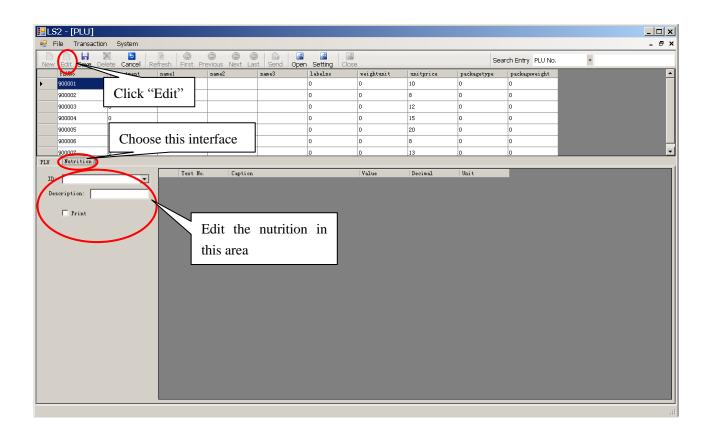


After your editing, please press "save" to keep information.

7 HOEKEY

This chapter is to explain for you how to make hotkey sheet. Click "File---Hotkey"

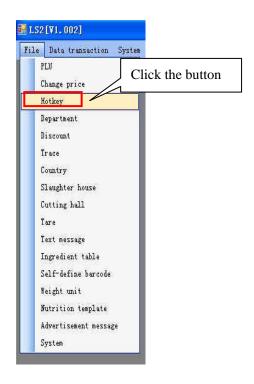




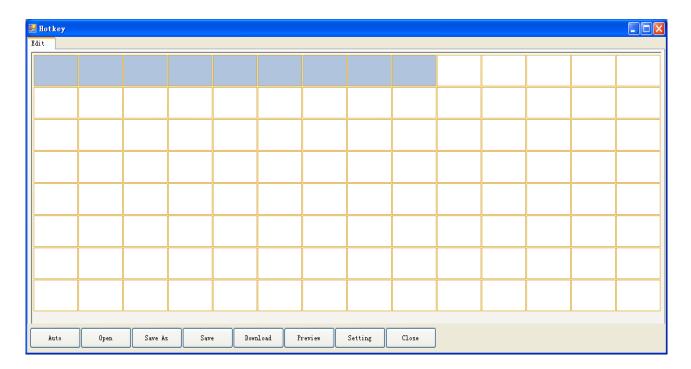





We can set one hotkey with two levels for sparing space and a convenient operation, which means a hotkey refers to two goods and we can choose them by pressing "shift" on keyboard. Please follow steps


 1^{st} level: use your mouse to select area where you want to set into hotkey, put them in selected status and then click the right button of your mouse like below

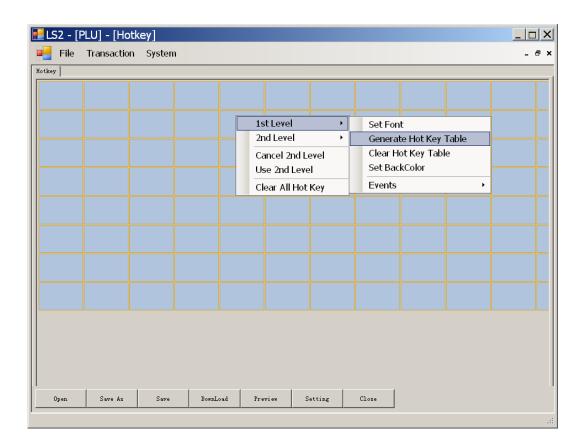


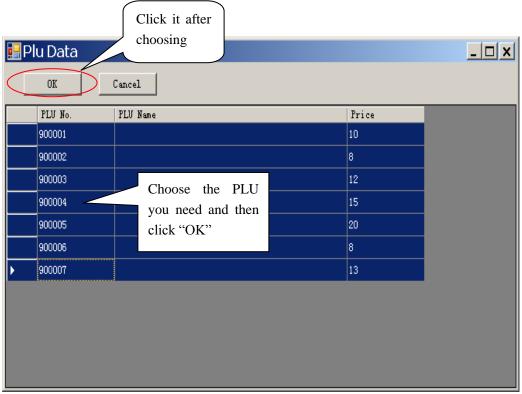

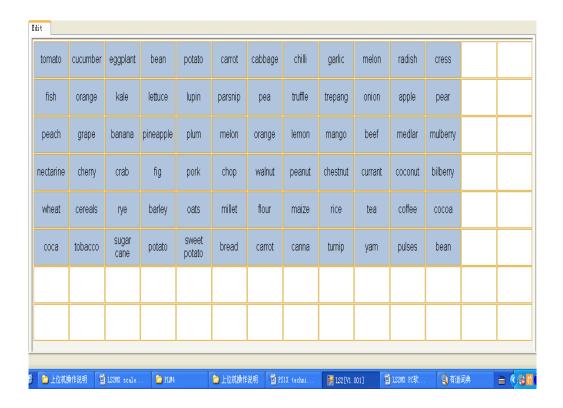



Then, if you are not satisfied with the font, or back color you can set what you need like below Clear Hot Key Table--- clear all messages on the hot key table.

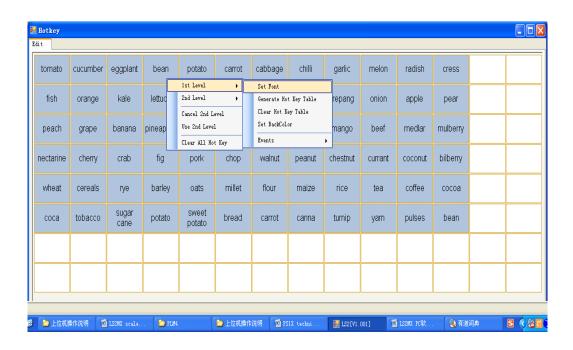

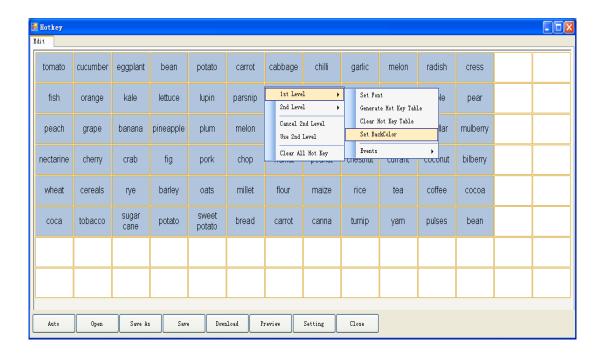


2st level:

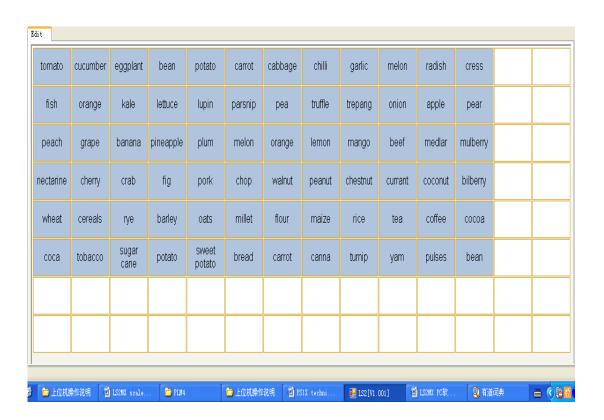


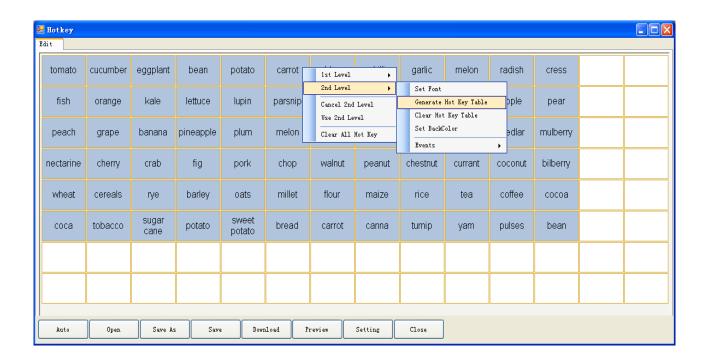





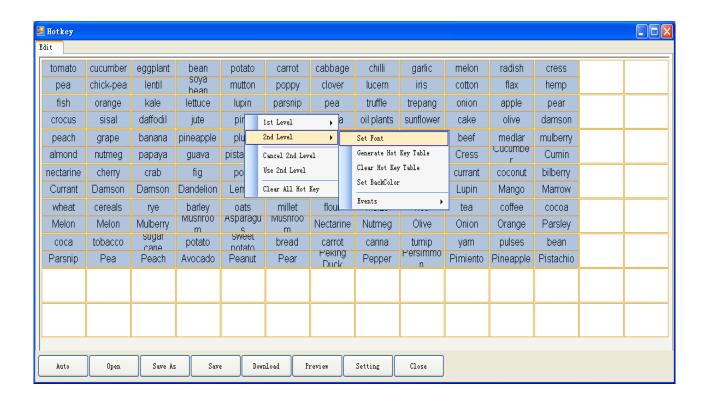

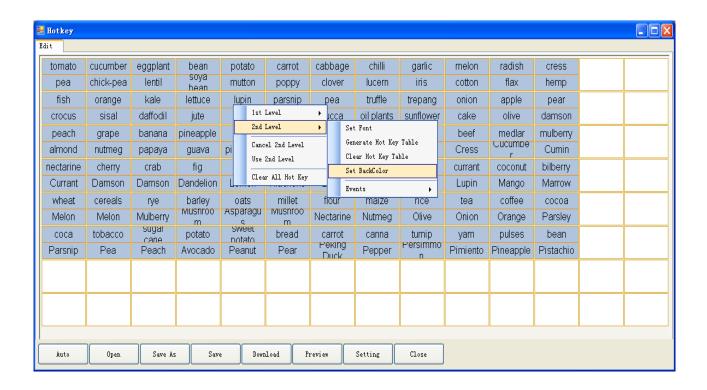

Other function:

- 1) Use 2nd Level: choose this item to use the second level on hotkey table.
- 2) Clear All Hot Key: clear all messages on the hot key table.
- 3) Click 'Preview' to preview the hotkey table:
- 4) Click 'Download' to download the hotkey table to scale.